




## BEFORE USE

The cricket table comes with 2 clips that help keep it fully flat. Remove them before attempting to open the table! These clips can later be used to help flatten the table for better storage.

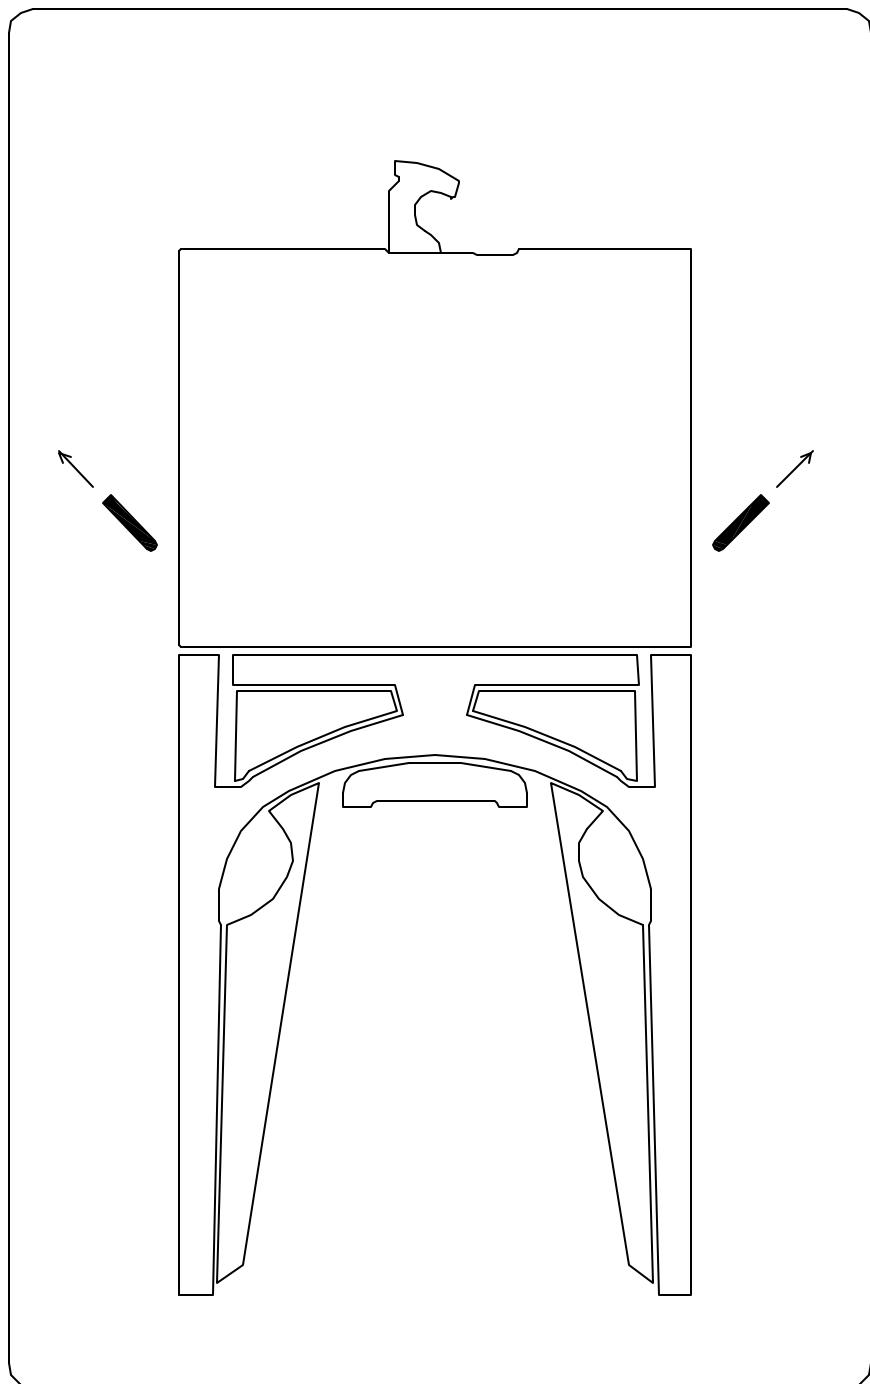


TO OPEN




TO CLOSE

TILT TABLE SLIGHTLY TOWARDS YOU

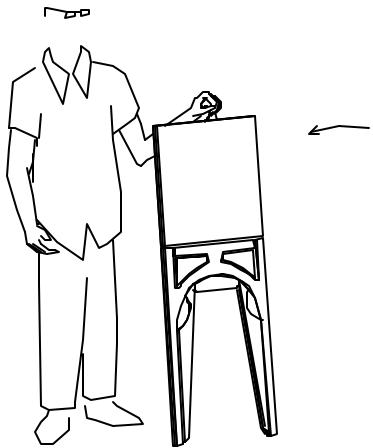


1

LIFT UP PIN LEVER FROM SLOT

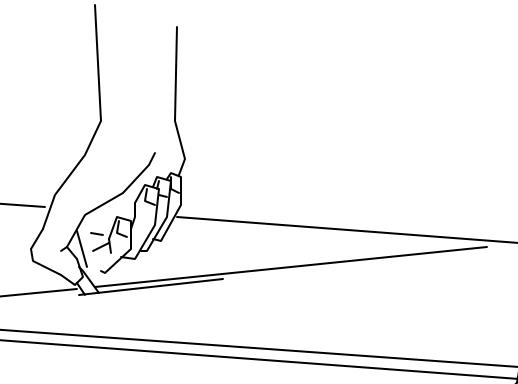


PUSH DOWN ON HANDLE TO OPEN

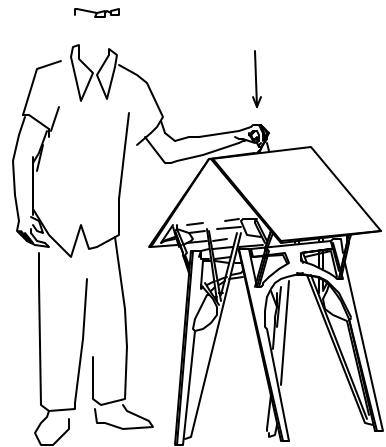


2

CONTINUE PULLING LEVER UNTIL  
HANDLE COMES OUT - PULL HANDLE  
OUT COMPLETELY

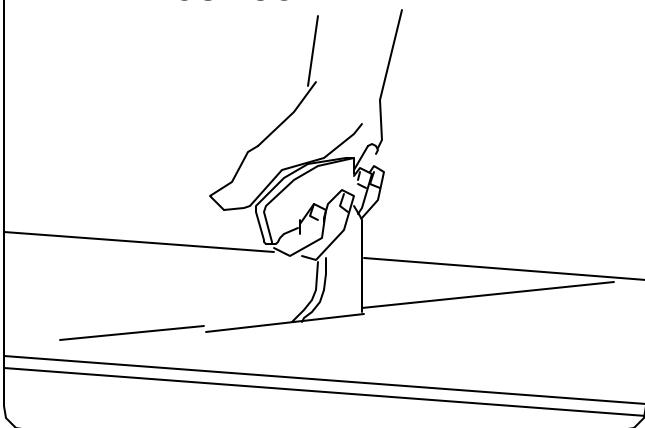


MAKE SURE TABLE IS FULLY OPEN,  
THEN PRESS HANDLE DOWN ALL THE  
WAY TO LOCK

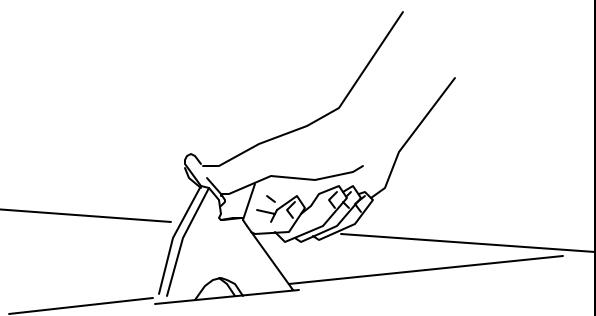

3

LIFT UP BY HANDLE TO FOLD

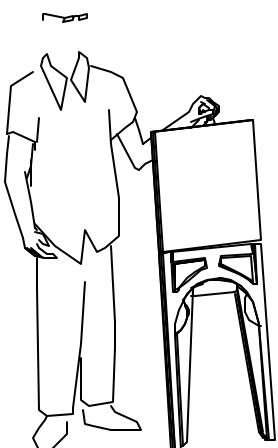




## STORAGE

Your folding table is designed to fit into a standard 24" deep closet. It can also be suspended by the built in hook.

Beware: the table is quite heavy. You should consult with your building professional to ensure your closet rod can support the weight. It is also advisable to keep the table as close to the ends of the rod as possible.

WE ARE NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY HANGING THE FURNITURE!

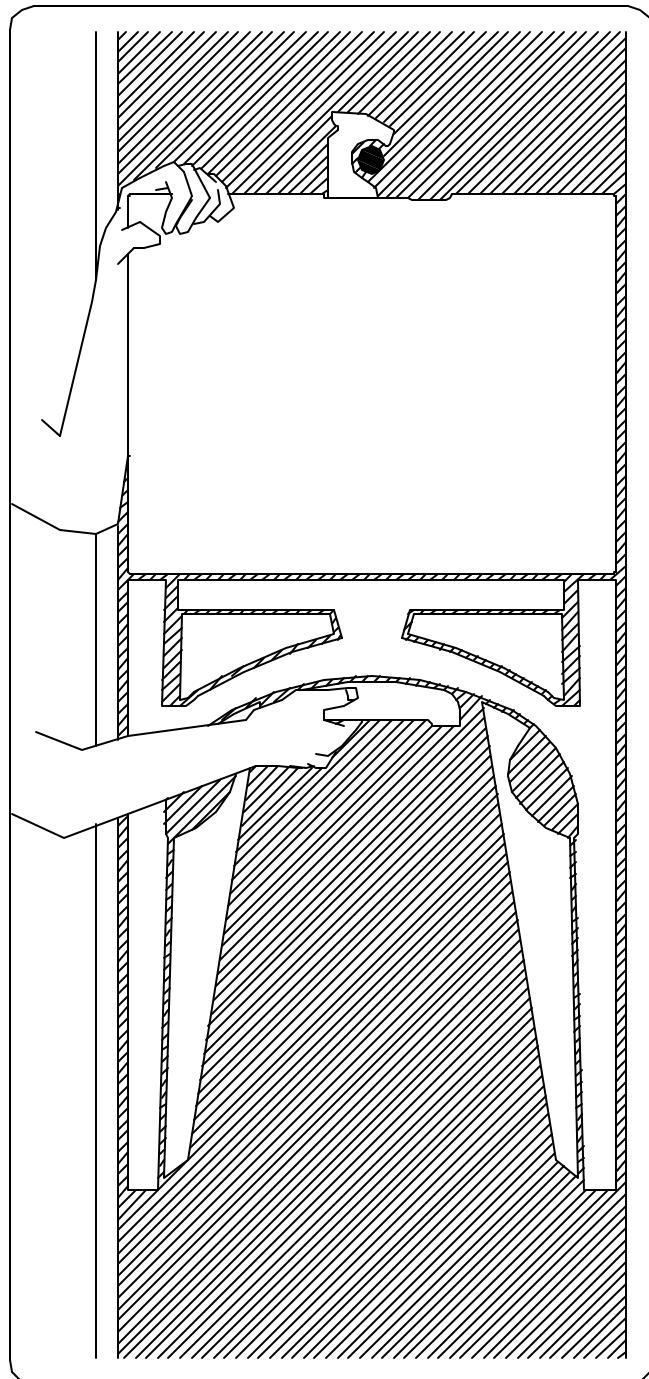



## WING EXTENSIONS

Wing extensions are designed to add extra seating at the ends of the table. Adding 2 extensions to a single cricket table makes a table that seats 4 people.

### TO ATTACH:

Lay the folded table on a flat surface.

Align the attachment tabs of the wing (1) with the slots on the table edge.  
Push the wing into place

Insert bracket support pins (2) into the small holes on the side of the table legs

Attach second wing the same way, if desired.

The table is ready to be opened.

**NOTE:** When the table is opened, the wings are locked into place and cannot be removed. Do not try to detach wings from an open table!

Although the cricket will fold with the extensions in place, it will be too wide to fit into a closet. Therefore we recommend removing the extensions for storage.

